



Zoooper / USA
Lan Enterprises, LLC
10140 SW Allen Blvd., Suite E
Beaverton, OR 97005
Toll Free number: 1-888-742-9899
FAX: 503-352-0929
E-mail: info@zoooper.com
Web: www.zoooper.com

Zoooper / Canada
Peter John M. Distributions, Inc.
88 SW Marine Dr.
Vancouver, BC
Canada
V5X 2R1
Tel: 1-888-597-0992
E-mail: info@zoooperbabycanada.com



INTERNATIONAL MODEL NUMBER: SL808F

CLOSING THE STROLLER FOR TRAVEL OR STORAGE

Each time, before closing your stroller, check the following:

- Your child is clear of moving parts
- The rear brakes have been set
- The backrest is in the full upright position
- The front wheels are secure in the locked mode
- The canopy is retracted
- All items have been removed from the basket
- The safety scarf is discharged

To close the stroller, push in on the main folding lock located in the middle of the stroller handle. With the main lock held in, pull up on the secondary lock while easing the stroller handle down, (Fig 11). Check to be sure the red frame lock secures to the locking pin.

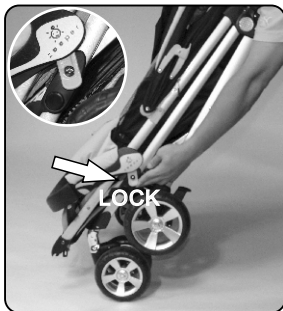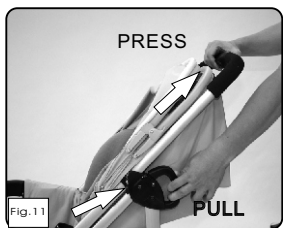

8

INTERNATIONAL MODEL NUMBER: SL808F



ATTACHING THE CANOPY

To attach the canopy, insert the plastic shafts into the plastic slots located on the outside of the main stroller tubes (Fig 9). Lift up to check that each side is locked into position. Open the canopy by pushing down on the plastic side canopy braces. Be sure to snap the canopy to the seat and backrest fabric whenever the seat is fully reclined. Retract the canopy by first pulling up on the side braces, then pushing the canopy hood back. The canopy can be converted to allow more air flow through the stroller. Unzip the lower half of the canopy from the upper half. This will leave a mesh cover that can snap to the back of the seat. The canopy may also be used as a napper canopy. Locate the zipper on the rear rib of the canopy. When unzipped the canopy will fall forward over the bumper bar, completely shading baby from the world. To remove the canopy, first undo the snaps. Then press in the release tabs, located on the plastic slots, while pulling up on the canopy shafts.

⚠ WARNING The rear panel of the canopy must be snapped onto the seat whenever the seat is fully reclined.

SAFETY HARNESS

Zoooper provides a special 5-point harness safety system. Used properly, this harness will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child's chest (Fig 10). Follow the same procedure to adjust the shoulder strap. For infant use, we recommend using the extra buckle (E) for added security. Always re-tighten the harness when your child is in a sit up or lay back position.

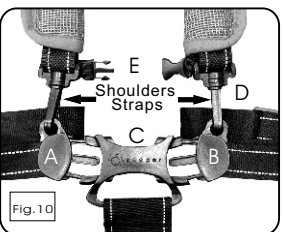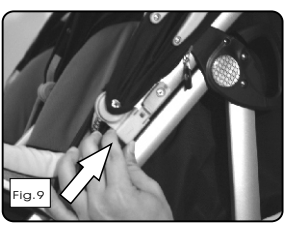

7

INTERNATIONAL MODEL NUMBER: SL808F

CAR SEAT COMPATIBILITY

Although we have done our best to make the Zoooper Tango as universally compatible as possible, the infant seat you have chosen may not fit well in the stroller. The models that we have tested and approved are: Evenflo On My Way Graco Snuggly and Safe Seat Britax Companion


To install an infant carrier, first be sure that the infant carrier is not attached to its permanent car base. Locate the car seat adapter strap that was packaged with your stroller. It should have a buckle in the center, and a clip on each end. Next, identify the D-rings located in the hip points of the stroller seat. Ensure that infant seat has been removed from its permanent car base.

Step 1 Recline the stroller seat to the 3" or 4" position. Step 2 Attach the car seat adapter strap to the stroller seat by clipping the ends to the D-rings. Adjust the strap so that it is fully extended. Unbuckle the center, and lay the ends out over the armrests of the stroller seat.


Step 3 Place the infant seat into the stroller seat, so that the infant seat is facing the parent. Depending on the size and design of your seat, you will either place it inside the bumper bar, or over the bumper bar.

Step 4 Bring the ends of the adapter strap back over the infant seat, and buckle the center. The belt should be positioned so that it travels over the top of the infant seat. Some models have belt guides located on the sides, if your model does, make sure the strap is positioned inside these guides.

Step 5 Tighten the strap down so that infant seat is securely fixed into the stroller seat. Infant seat should not lift out of the stroller seat if properly strapped in.

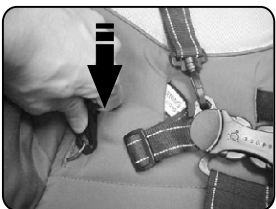

6

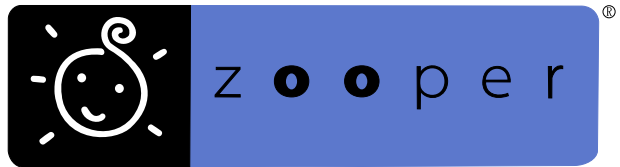

User Guide Tango SL808

⚠ WARNINGS

IMPORTANT CARE AND SAFETY INFORMATION

- Avoid serious injury from falling or sliding out, always use safety harness provided.
- Always engage the rear brakes when not holding onto your stroller.
- Never leave your child unattended.
- Never use the stroller near an open fire or exposed flame.
- Never allow the stroller to be used as a toy.
- Never allow more than one child at a time in the stroller, per seat.
- Never hang bags or other items from the handle or on the canopy. This may cause the stroller to become unstable.
- Never use the stroller on stairs or escalators.
- Do not overload the basket. Maximum load is 7 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Do not overload the canopy pocket: Maximum load is 2 lbs. Excessive weight may create a hazardous unstable condition to exist.
- Before each use, check to make sure the stroller is set up properly and that all the wheels are properly and securely attached.
- This stroller is not recommended for use with a child over 40lbs, excessive weight may damage the stroller and cause it to be unsafe.
- This stroller is designed as a walking stroller. We do not recommend running, roller blading, or other such activities with this stroller.
- The manufacturer does not approve use of any attachments designed to accommodate additional children, use of these types of attachments may cause your stroller to be unsafe and/or unstable and may void your warranty.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.
- Do not use if any part of the stroller becomes damaged, broken, unstable or missing.
- Discontinue use immediately and contact customer service.
- Failure to follow these warnings and instructions could result in serious injury or death.
- Never use the product in a manner inconsistent with the manufacturer's instructions.

1

MAINTENANCE

- Do not fold your stroller when wet.
- Machine wash removable seat and armrest covers using gentle cycle, cold water, and a mild detergent. The canopy can only be spot washed. Line dry fabric parts.
- Never use bleach when washing.
- Do not leave your stroller in direct sunlight for extended periods of time.
- Clean and lubricate all moving parts on the stroller frame and wheels as needed. Use only a penetrating silicon based lubricant.
- Regularly check for loose screws, broken parts, etc. Use only Zoooper approved replacement parts available through the service centers listed below.
- Wipe off any sand, salt or other corrosive residue after each use where the stroller may be exposed to those elements.

In order to maintain the highest quality standards, the distributor reserves the right to improve or alter any Zoooper stroller design without notice or obligation to any previous purchaser. For questions or service needs, please contact the service center located in your country of residence. Sending in your warranty card will help expedite any service needs.

INTERNATIONAL MODEL NUMBER: SL808F

IMPORTANT: READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE USING YOUR STROLLER AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zoooper.



UNLOCKING & OPENING THE FRAME

To open the stroller, first lift up on the gray colored frame lock located on the left side of the stroller, (Fig 1). Be sure the frame lock detaches from the metal locking pin. Then pull up on the main stroller handle while pushing down on the top of the secondary lock, (Fig 2). Using your hand, push down on the front edge of the seat to ensure the stroller frame has locked properly in the open position. Do not push down on the front armrest bar.

⚠ WARNING Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the stroller.

ATTACHING THE FRONT WHEELS TO THE FRAME

The front wheels slide into the metal ends of each front leg tube. Press each wheel block firmly onto the metal end tubes until they "click" into position (Fig 3). Check to see they have been properly installed by pulling down on the wheel block. It should not move from the leg tube at all. Should there be a need to remove the front wheels, first locate the rounded metal spring lock on the side of the metal wheel housing. Press the spring lock in while pulling the wheel off the front leg tube.

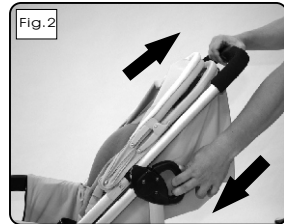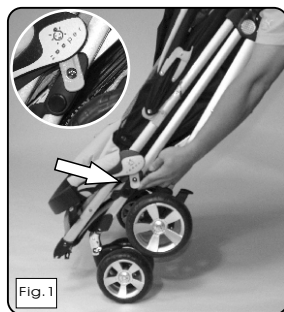

3

INTERNATIONAL MODEL NUMBER: SL808F

ATTACHING THE REAR AXLE & WHEELS TO THE FRAME

The rear wheels and rear axle come pre-assembled. Insert both plastic rear wheel housings onto the rear leg tubes of the stroller (Fig 4). Make sure the brake levers are facing out, away from the stroller. Then push in each locking spring located on the rear stroller tubes. Holding the locking pin in, slide each wheel block over the pin until it locks into place and the silver head of the locking pin can be seen protruding from the wheel housing (Fig 5).

Should there be a need to remove the rear wheel assembly, push in on the locking pins while pulling down on each wheel block.


⚠ WARNING Do not use the stroller if the brake levers are not facing away from the stroller and if the locking pins are not visible as described above. Contact the appropriate service center listed at the back of these instructions if you have questions.

When engaging the brakes, only press on the brake lever located on the inside of the wheels. Never press down on the brake bar.

ADJUSTING THE SEATBACK

To lower the backrest, lift up on the plastic lever located in the middle of the seatback. While holding the lever up, move the seatback down into desired position and then release the lever (Fig 6). To raise the backrest, push up on the back of the seat until it "clicks" into the desired position.

⚠ WARNING Always keep your child in sight when making these kinds of adjustments. Check the fitting of the safety harness each time the backrest is adjusted to be sure a snug, yet comfortable fitting is maintained.

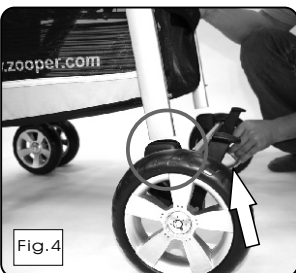

4

INTERNATIONAL MODEL NUMBER: SL808F

ATTACHING THE ARMREST TO THE STROLLER SEAT

To attach the front armrest to the stroller seat, line up the inserts of the armrest bar with the two plastic tabs on both sides of the stroller seat (Fig 7). Slide the inserts completely into these slots, making sure that both sides secure into a locked position. Pull out of each side of the armrest to make sure the armrest is properly locked into the tabs. The armrest should not release from the tabs. To remove the armrest, locate the plastic tabs underneath where the armrest connects to the sides of the stroller. Press in the tabs while pulling up out on the armrest.

⚠ WARNING Never pick up your stroller by the armrest. To avoid serious injury, ensure that children's hands, arms, and feet are well clear of the bumper bar before opening or closing it.

USING THE SAFETY SCARF WHEN SEATBACK IS FULLY RECLINED

The safety scarf must be used whenever the seat is in a fully reclined position. The safety scarf is combined with footrest. When you use the scarf, adjust the footrest into the upright position. Then to line up the zipper of the footrest and the scarf and zip them together. (Fig 8).

⚠ WARNING Your child may slip into leg openings and strangle. Never use the stroller with the backrest fully reclined unless this baby safety scarf is looped around the armrest and secured in place.



5